




## Microsafe flat mop with strap tape system

Microfibre flat mop for non-slip floors and removal of ingrained dirt, with strap tape system support

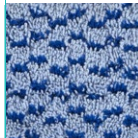

### Technical information

code	notes	cm (comm. sizes)	cm (real sizes)	C	pcs	kg	m <sup>3</sup>
00000718		↕ 30 ↕ 12	↕ 32 ↕ 12,5		25	1,49	0,011
00000724		↕ 40 ↕ 12	↕ 44 ↕ 12,5		25	2,3	0,025
00000714		↕ 60 ↕ 12	↕ 64 ↕ 12		25	3,08	0,025

### SYSTEM

Flat mopping system with frame with strap tape system, to be used either pre-soaked, soaked on demand with soaking station or with handles with tank  
Ideal for washing of non-slip or porous surfaces, suitable to remove ingrained dirt

### GREEN BOX



EU Ecolabel Certificate



**DECITEX of the fibres**  
Microfibre: 0,16 DTX



**Efficient:** microfibre requires less chemical to remove dirt and bacteria, reducing water and chemical consumption

### Advantages

- **Easy:** mop changing is easy and quickly
- **Ergonomic:** it is the most lightweight system of TTS range
- **Highest hygiene:** microfibre penetrates into the microporosity of the floor, collecting dirt and more than 95% of bacteria
- **Long durability:** high quality strap tape to ensure a long life of the mop



### Material

Yarn: 70% microfibre (80% polyester, 20% polyamide) - 30% polypropylene - Support: polyester

### Features

Polypropylene inserts for an abrasive action, but respectful of the surfaces

### Warnings

Use alkaline detergents with a pH below 11

### Washing conditions

#### Guidelines for proper fibre maintenance

Follow the washing instructions (temperatures and dosage) on the detergent packaging  
Perform a pre-wash in cold water to remove any residual product used during cleaning operations  
Do not use fabric softener  
It is recommended to use the convenient laundry nets in washing machine in order to preserve the fibres  
Recommended use of normal textile detergent  
Do not use detergents with Ph > 11

### Specific mop instructions



Washing temperature max 90° C, recommended 60°



Bleaching only with oxygen, do not use chlorine or bleach



Tumble dry or in a dryer possible with low program



### Related products



Velook frame




Velook frame with Block System



BIO Pro with strap tape system



BIO Basic with strap tape system



Clean Glass frame

### Product options



Flat mop Microblue with strap tape system