




## Flat mop Microblue with strap tape system

Microfibre flat mop, highly absorbent, with strap tape system support

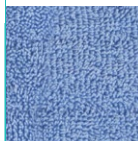

### Technical information

code	notes	cm (comm. sizes)	cm (real sizes)	C	pcs	kg	m <sup>3</sup>
00000729		↕ 30 ↕ 12	↕ 32 ↕ 12,5		25	1,44	0,011
00000727		↕ 40 ↕ 12	↕ 46 ↕ 12,5		25	2,03	0,014
00000728		↕ 60 ↕ 12	↕ 64 ↕ 12		25	3,03	0,025

### SYSTEM

Flat mopping system with frame with strap tape system, to be used either pre-soaked, soaked on demand with soaking station or with handles with tank  
Ideal for recurring washing of smooth surfaces

### GREEN BOX



EU Ecolabel Certificate



**DECITEX of the fibres**  
Microfibre: 0,16 DTX



**Efficient:** microfibre requires less chemical to remove dirt and bacteria, reducing water and chemical consumption



Code 00000727 is classified as having a low release of microplastics during washing (test conducted according to ISO 23231 by a specialised external laboratory)

### Analysis

The analysis of the mechanical action of the Microblue mop revealed a removal of Coronavirus 229E from steel surfaces of 99.9% (test conducted by a specialised external laboratory)

The analysis of the mechanical action of the Microblue mop revealed a removal of up to 96.6% of the bacteria present on the surface (test conducted according to UNI EN 16615:2015 by a specialised external laboratory)



## Advantages

- **Easy:** mop changing is easy and quickly
- **Ergonomic:** it is the most lightweight system of TTS range
- **Highest hygiene:** microfibre penetrates into the microporosity of the floor, collecting dirt and more than 95% of bacteria
- **Long durability:** high quality strap tape to ensure a long life of the mop

## Material

Yarn: microfibre (85% polyester, 15% polyamide) - Support: polyester  
Packaging: [click here to see the environmental labelling of packaging](#)

## Warnings

Use alkaline detergents with a pH below 11

## Washing conditions

### Guidelines for proper fibre maintenance

Follow the washing instructions (temperatures and dosage) on the laundry detergent packaging  
Perform a pre-wash in cold water without laundry detergent to remove any residual product used during cleaning operations

Recommended use of professional textile laundry detergent

Do not use fabric softener

Do not use laundry detergents with Ph > 11

The use of laundry nets is recommended to speed up and make laundry operations more hygienic

## Specific mop instructions



Washing temperature max 90° C, recommended 60°




Bleaching possible, do not use chlorine




Tumble dry or in a dryer possible with low program



### Related products

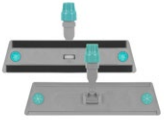

Velook frame

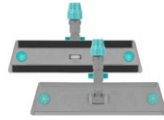

Velook frame with Block System



BIO Pro with strap tape system



BIO Basic with strap tape system




Clean Glass frame

### Product options



Microriccio flat mop with strap tape system



Microsafe flat mop with strap tape system